

Baofeng UV-5R8W Display Menu

nid2m70cm@gmail.com Ver2.0 2022-07-13

Change **1** Power **Temporarily** by short push **#** on Radio Keypad, **if too long will lock keypad**

+ **-** Indicate **2** A Different Transmit Freq is Programmed for Repeater, These Transmit Freqs are Not visible Baofeng Display

3 **R** Reverses Repeater Transmit & Receiver Freqs **Unless You Understand THIS SHOULD BE OFF**, Indicates You didn't hold ***SCAN** down long enough to hear Scanning Begin when selecting Scan: To Fix Turn radio off and back

4 **N** = Narrow Band Mode, Normally used for Comm/Public & Gov Freq

5 **S** = Dual Watch Option is On, This Means that You will Receive Transmissions on Both Upper & Lower Channels, **creates problems for novice users**

6 Keypad Lock On

7 Battery Meter


8 **If in Menu Mode** this becomes the Menu Item Number Otherwise its Chnl #

15 Signal Strength Meter

9 Always same as Chnl # on Left Side of Screen

Indicates **14** a Sub-Audible Tone is On, Used on Repeater Channels to Ensure Signal Retransmitted by Repeater

Note **VFO/MR** Button Switches Between Freq & Chnl Mode

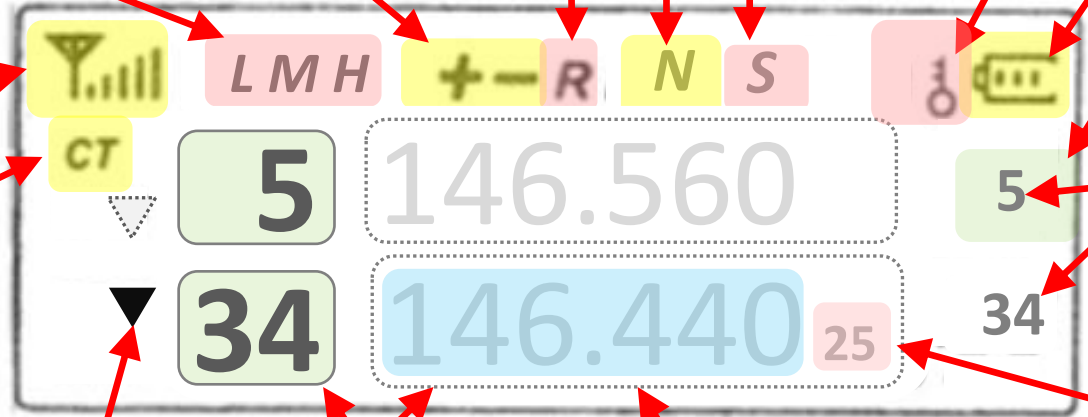

13 Indicates Bottom Line is the Active Chnl or Freq, Use **A/B** to Move to Top

12 Not Possible to View Chnl # & Freq at Same Time on the Same Line

11 Freqs are not displayed in Chnl Mode unless Menu Item #(21 Top) / #(22 Lower) Line is Set to View **Freq** vs Name or Chnl in Chnl Mode

10 Last 1 or 2 digits are shrunk if more than 6 digits in Freq entered